


HOW TO: REVERSE ALUMINUM WINCH

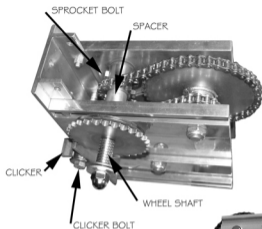

- STEP 1: REMOVE SPROCKET BOLT
STEP 2: REMOVE WHEEL SHAFT WHILE HOLDING SPACER AND SPROCKET
STEP 3: INSERT WHEEL SHAFT THRU OPPOSITE SIDE OF WINCH
STEP 4: REPLACE SPROCKET BOLT
STEP 5: REMOVE CLICKER BOLT AND CLICKER. INSTALL AS SHOWN BELOW. (NOTE. NOTCH IN WINCH SIDE IS NOT NEEDED WHEN REVERSING.)
STEP 6: TIGHTEN ALL BOLTS.



IMPORTANT! ON ELITE LIFTS, MAKE SURE BED CABLE IS RUNNING FROM CORNER CLOSEST TO WINCH TO OPPOSITE CORNER. MAKE SURE WHEEL IS TURNING CLOCKWISE TO RAISE BOAT.