


HIGH WIND TIE DOWN KIT

INSTALL 1/2" NUT INTO HOLDER.
THREAD 1/2" BOLT INTO NUT.

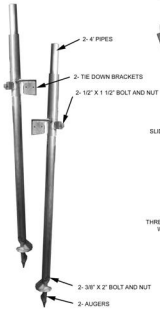

SLIDE TIE DOWN KIT OVER SIDEFRAME.



THREAD PIPE INTO GROUND WITH A PIPE
WRENCH AND TIGHTEN 1/2" BOLT.

